



Personal Open source Business Explore

Pricing Blog Support

This repository

Sign in

Sign up

raspberrypi / documentation

Watch

182

Star

934

Fork

554

Code

Issues 56

Pull requests 31

Pulse

Graphs

Branch: master

documentation / hardware / raspberrypi / bootmodes / msd.md

Find file

Copy path

Liam Fraser Add pxetools. Rewrite net\_tutorial.md to use rpi-update

14425da 12 days ago

2 contributors

109 lines (87 sloc) 4.08 KB

Raw

Blame

History



# How to boot from a USB Mass Storage Device on a Raspberry Pi 3

This tutorial explains how to boot your Raspberry Pi 3 from a USB mass storage device such as a flash drive or USB hard disk. Be warned that this feature is experimental and may not work with all USB mass storage devices.

## Program USB Boot Mode

Before a Pi will network boot, it needs to be booted with a config option to enable USB boot mode. Enabling this config option requires a special `start.elf` and `bootcode.bin` file. These can be installed by using the "next" branch on `rpi-update`.

Go to the [Downloads page](#) and install Raspbian onto an SD card using `Win32DiskImager` if you are on Windows, or `dd` if you are on Linux/Mac. Boot the Pi.

First, prepare the `/boot` directory with experimental boot files:

```
# If on raspbian lite you need to install rpi-update before you can use it:
$ sudo apt-get update; sudo apt-get install rpi-update
$ sudo BRANCH=next rpi-update
```

Then enable USB boot mode with:

```
echo program_usb_boot_mode=1 | sudo tee -a /boot/config.txt
```

This adds `program_usb_boot_mode=1` to the end of `/boot/config.txt`. Reboot the Pi with `sudo reboot`, then check that the OTP has been programmed with:

```
$ vcgencmd otp_dump | grep 17:
17:3020000a
```

Ensure the output `0x3020000a` is correct.

If you wish, you can remove the `program_usb_boot_mode` line from `config.txt` (make sure there is no blank line at the

end) so that if you put the SD card in another Pi, it won't program USB boot mode. You can do this with `sudo nano /boot/config.txt`, for example.

## Prepare the USB storage device

Now that your Pi 3 is USB boot-enabled, we can prepare a USB storage device to boot from. Start by inserting the USB storage device (which will be completely erased) into the Pi. Rather than downloading the Raspbian image again, we will copy it from the SD card on the Pi. The source device (sd card) will be `/dev/mmcblk0` and the destination device (USB disk) should be `/dev/sda` assuming you have no other USB devices connected.

We will start by using `parted` to create a 100MB fat32 partition, followed by a Linux ext4 partition that will take up the rest of the disk.

```
sudo parted /dev/sda

(parted) mktable msdos
Warning: The existing disk label on /dev/sda will be destroyed and all data on this disk will be lost. Do you
Yes/No? Yes
(parted) mkpart primary fat32 0% 100M
(parted) mkpart primary ext4 100M 100%
(parted) print
Model: SanDisk Ultra (scsi)
Disk /dev/sda: 30.8GB
Sector size (logical/physical): 512B/512B
Partition Table: msdos
Disk Flags:

Number  Start   End     Size    Type    File system  Flags
  1      1049kB  99.6MB  98.6MB  primary fat32        lba
  2      99.6MB  30.8GB  30.7GB  primary ext4         lba
```

Your `parted print` output should look similar to the one above.

Create the boot and root filesystems:

```
sudo mkfs.vfat -n B00T -F 32 /dev/sda1
sudo mkfs.ext4 /dev/sda2
```

Mount the target filesystems and copy the running raspbian system to it:

```
sudo mkdir /mnt/target
sudo mount /dev/sda2 /mnt/target/
sudo mkdir /mnt/target/boot
sudo mount /dev/sda1 /mnt/target/boot/
sudo apt-get update; sudo apt-get install rsync
sudo rsync -ax --progress /boot /mnt/target
```

Regenerate ssh host keys:

```
cd /mnt/target
sudo mount --bind /dev dev
sudo mount --bind /sys sys
sudo mount --bind /proc proc
sudo chroot /mnt/target
rm /etc/ssh/ssh_host*
dpkg-reconfigure openssh-server
```

```
exit
sudo umount dev
sudo umount sys
sudo umount proc
```

Edit `/boot/cmdline.txt` so that it uses the USB storage device as the root filesystem instead of the SD card.

```
sudo sed -i "s,root=/dev/mmcblk0p2,root=/dev/sda2," /mnt/target/boot/cmdline.txt
```

The same needs to be done for `fstab`

```
sudo sed -i "s,/dev/mmcblk0p,/dev/sda," /mnt/target/etc/fstab
```

Finally, unmount the target filesystems, and power off the Pi.

```
cd ~
sudo umount /mnt/target/boot
sudo umount /mnt/target
sudo poweroff
```

Disconnect the power supply from the Pi, remove the SD card and reconnect the power supply. If all has gone well the Pi should begin to boot after a few seconds.

